




Disassembling HP Mini 210 Back Case

Removing the back case on this computer so you can get inside.

Written By: Heather Freed

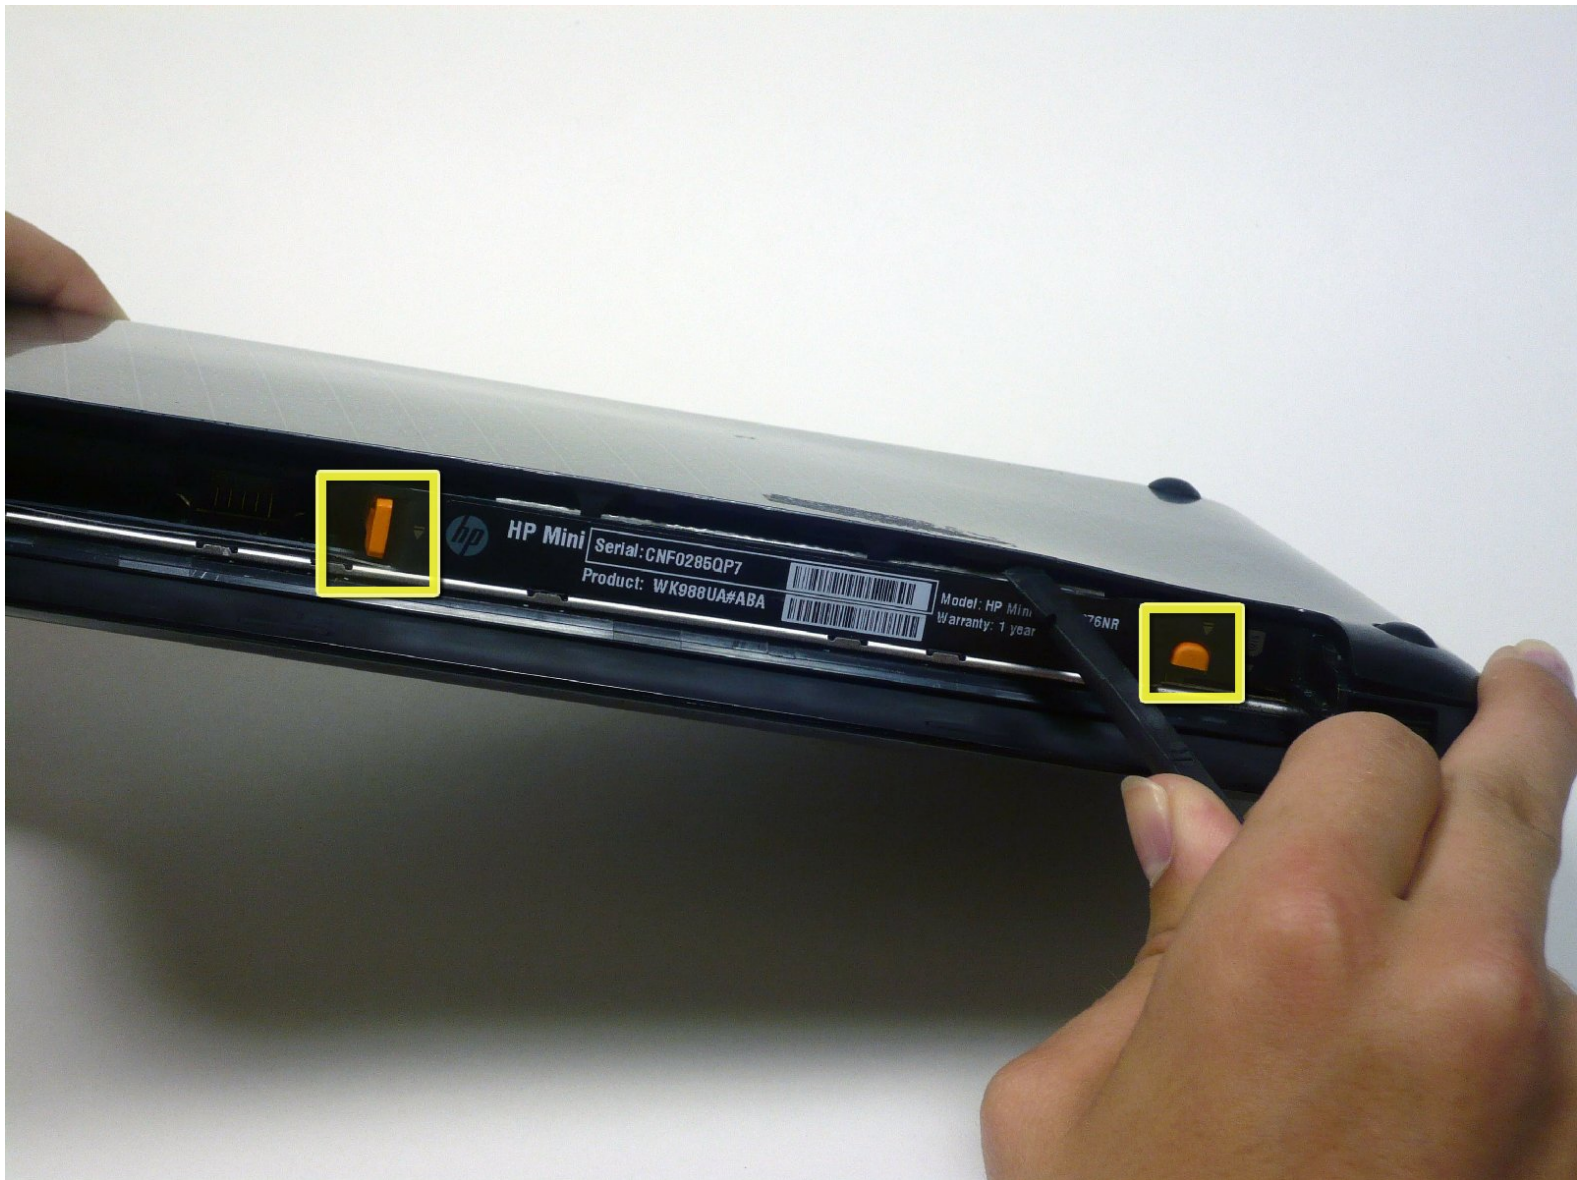

INTRODUCTION

Removing the back case is easy and snaps right off, giving you access to all the parts inside.



TOOLS:

- [Spudger](#) (1)
-

Step 1 — Battery



- i** Turn off and unplug the netbook before replacing the battery.


 - Hold the netbook top-side down with the lid closed.
 - Slide the plastic battery release latches towards the lock symbol.
- i** The left tab becomes unlocked completely, but you will need to hold the right tab towards the lock symbol as you remove the battery.

Step 2



- Remove the battery.

Step 3 — Back Case

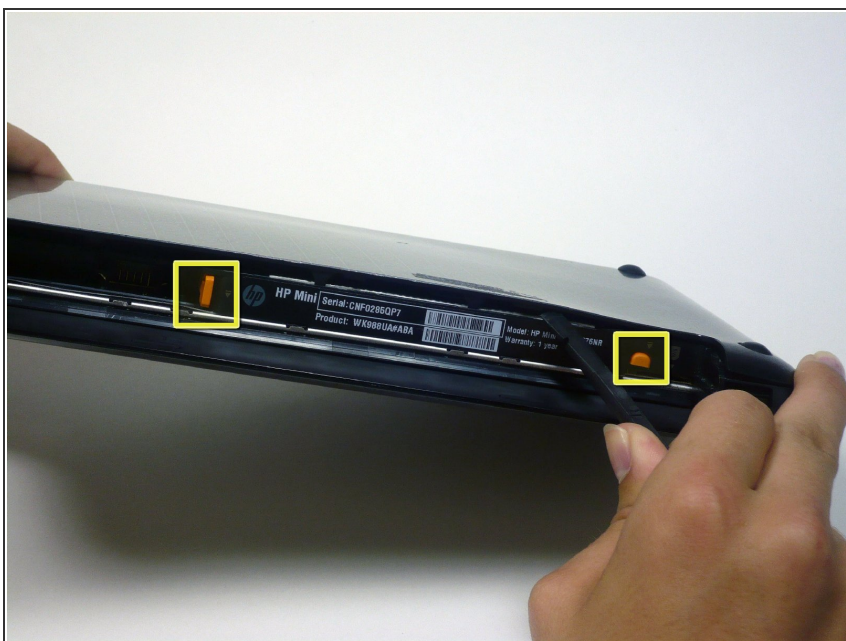

- Press both orange eject buttons simultaneously, and use a spudger to pry off the back case.

Step 4



- ❗ If the back case does not separate from the netbook easily, use the spudger to pry off the back case by the edge near the battery compartment, and work your way to the sides. The case will then pivot from the front edge.

Step 5



- Pull the back case off from the front edge.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 02:44:26 AM.